

CPM-10 Economical Multifunction Power Meter

Operation manual



CPM-10 Economical Multifunction Power Meter

DESCRIPTION

CPM-10 Multifunction meter product single phase, three phases high accuracy measurement of parameters such as voltage, current, active power, reactive power, apparent power, power factor, frequency, effective energy, with display and remote communication function. Option 1 set relay output, 1 analogue and 1 RS485 (Modbus RTU Mode) or 1 pulse output. Most suitable for power management, remote input/output, alarm and remote signal control uses needs. Having case depth 120mm only, easy panel mounting installation.



FEATURE

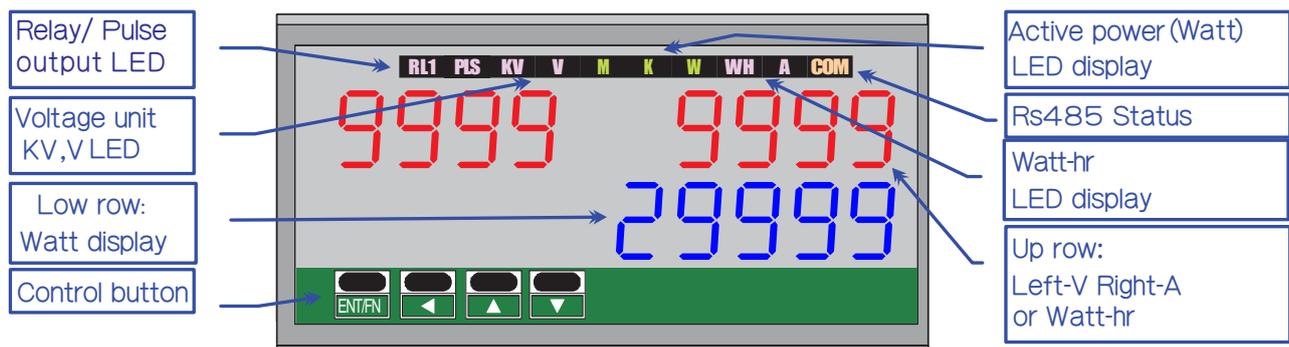
- Input 1P2W, 1P3W, 3P3W, 3P4W Unbalanced or balanced load system's active power, reactive power, apparent power and electric energy (Watts-Hr) etc parameters.
- Dual display, upper row 4 digits for voltage/ 4 digits for current (or 10 digits Watts-Hr), lower row 4 1/2 digits Watts.
- 1 set relay (SPDT) output, with 3 variable setting (R1.1/R1.2/R1.3), each react to setting parameters V.AVG/I.AVG/FREQ/P.TL/Q.TL/ S.TL / PF.AVG / AE.TL / RE.TL / VA / VB / VC / IA / IB / IC / PF-A / PF-B / PF-C / P-A / P-B / P-C / Q-A / Q-B / Q-C / S-A / S-B / S-C, having relay function : Hi / Lo / Hi Hold / Lo Hold / Do / OFF; further advance function , start delay, hysteresis, time delay, reset delay etc
- 1 analogues output same as relay setting parameters.
- Output range: Current 0~10mA / 0~20 mA / 4~20 mA / 4~±20 mA / ±10 mA / ±20 mA (Default 4-20mA)
- Output range: Voltage 0~5V / 1~5 V / 0~10 V / 0~±5 V / 1~±5 V / 0~±10 V / ±5 V / ±10 V (Default 0-10V)
- Option pulse and RS 485 communication output.

Application


Motor control/ panel power monitoring/power consumption monitor and control/power distribution system /intelligent building & automation power management system/ power testing equipment

The CPM-10 system (SCADA) monitoring as a power front-end measurement unit, for volume measurement and control of remote power. Industry-standard RS-485 communication interface and MODBUS protocol, making connecting to the network easily convenient, want to choose the management of the SCADA system. °

Front panel and button




Dimension

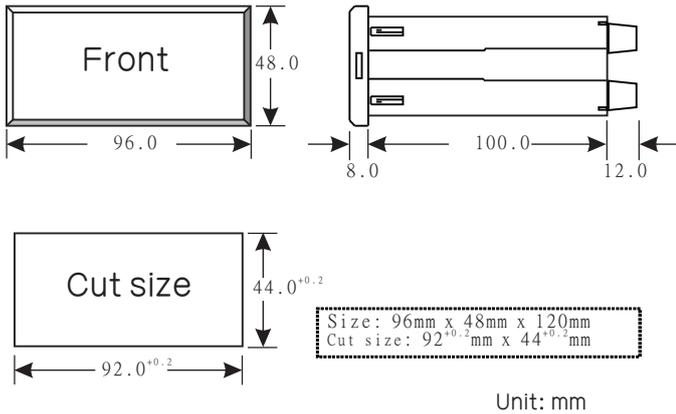

Installation

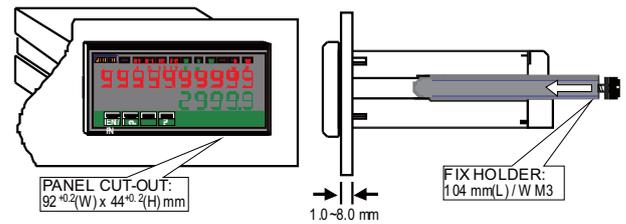This meter is installed does not exceed the maximum operating temperature and humidity environment.



Operation button

4 Control button Enter / Shift / Up / Down

- Enter/Fun key: Enter setting/save changes and enter next parameters
- Shift key: Change decimal/back to previous or escape setting
- Up key: Increase / back to previous
- Down key: Decrease / to next

LED Unit

- Voltage unit LED: 2 rectangular red LED indicate KV or V, on when display select V-A
- Watt unit LED: 3 Rectangular green LED, on when display select KWH, automatic switch KW or MW units
- Watt-hr LED: 1 rectangular red LED, on when select KWH display, only display WH, K/M unit follow Watt.
- Current unit LED: 1 rectangular red LED, on when select display V-A

Display digits

PV values: 5 digits; 0.28" (0.71cm) red LED
 Accumulative values 10 digits; 0.28" (0.71cm)

LED status

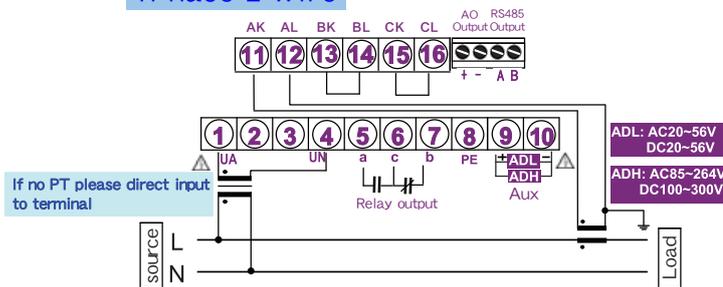
- PLS Pulse output: 1 rectangular red LED, when pulse output LED blink; blink faster mean more watt-hr used.
- RS 485 Com.: 1 rectangular orange LED, when Rs485 send/receive data, LED blink' blink faster mean data transfer
- Relay: 1 rectangular red LED, LED light when relay energized ECI input

Output wiring


Please check if the voltage is correct and connect to the right terminal number when wiring

■ With CLAMP CT, the secondary side do not ground, otherwise the meter burned


1Phase 2 wire




3Phase 3wire 2CT (Unbalanced)

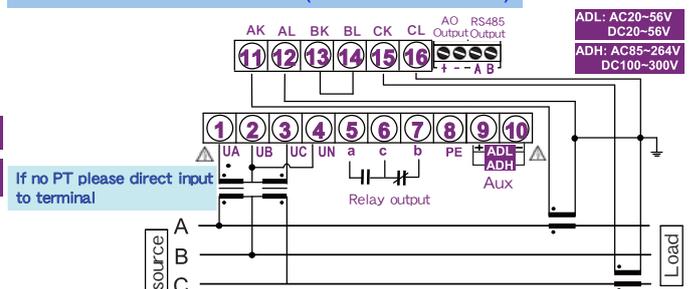

1Phase 3 wire

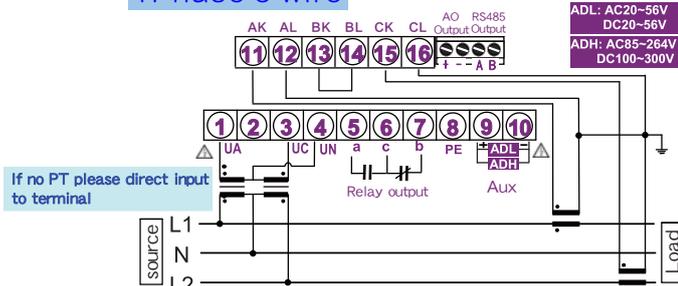

3Phase 3wire 3CT (Unbalanced)

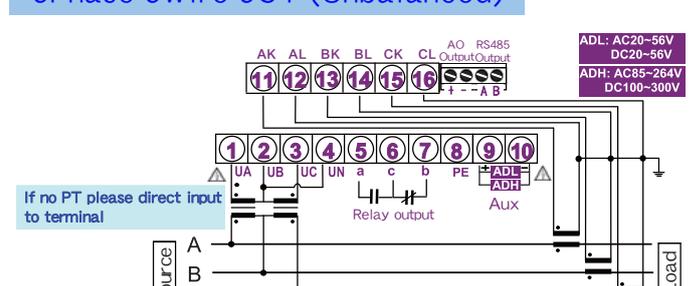


■ With CLAMP CT, the secondary side do not ground, otherwise the meter burned

Output wiring


When wiring, be sure to confirm that the supply voltage is correct and access the correct terminal number.

Equipment and instrumentation safety, it is recommended to install the fuse or no fuse switch in the instrument before. **With CLAMP CT, the secondary side do not ground, otherwise the meter burned**

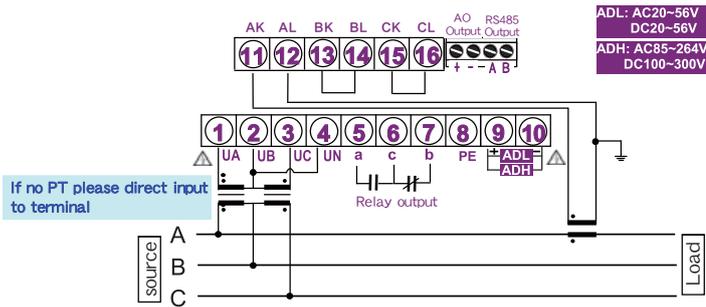
3Phase 3wire 1CT (Balanced)




3Phase 4wire 3CT (Unbalanced)

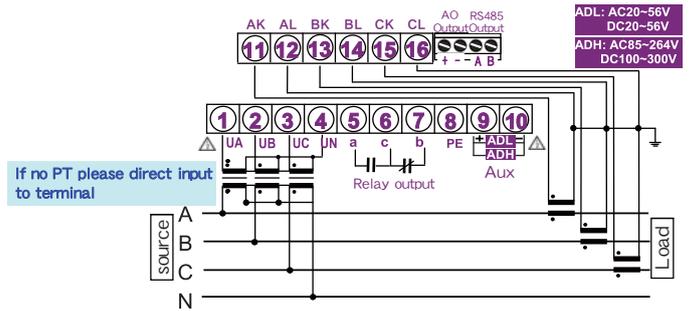

3Phase 4wire 1CT (Balanced)

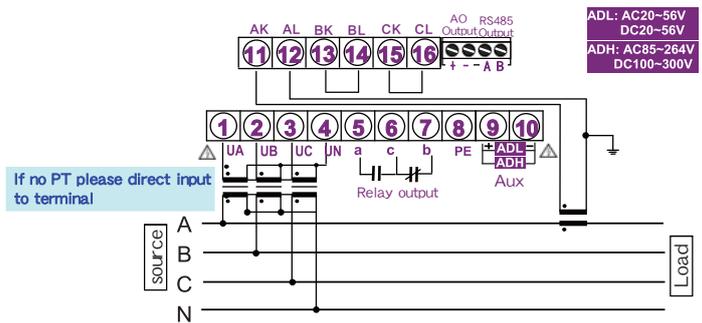

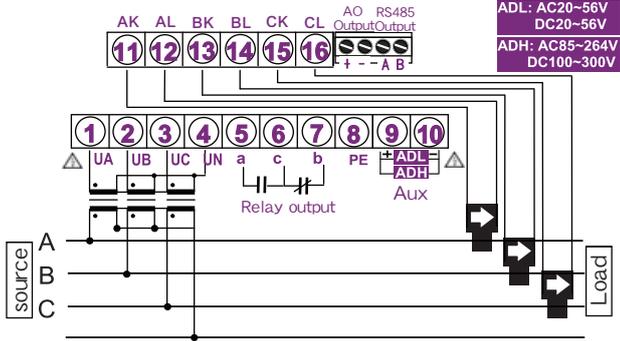Example
With CLAMP CT, the secondary side do not ground, otherwise the meter burned




Clamp CT



Optional of Clamp CT, make sure

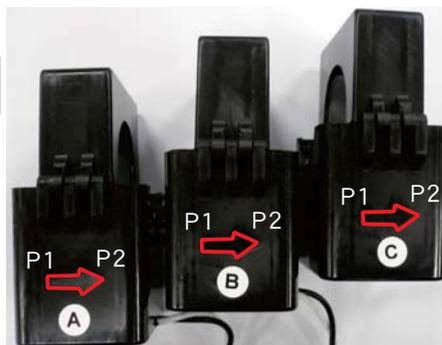- (1) CT of the SN number with the CPM-10 SN number, as shown
- (2) On the label A:A-Phase; B:B-Phase ; C:C-Phase ; According to the phase matching
- (3) S1 (white) connected "K" side; S2 (black) connected "L" side (A.B.C Phase are the same then the law)




Direction of the arrow indicates the direction for the primary current through P1-P2


Analogue output

Wire terminal


Terminal: A1~A16: 20A/600Vac, M3.5, 22~12AWG;
Max Torque: 13Kg-cm




Output Terminal: 10A 300Vac, M2.6, 22~16AWG,
Max Torque: 5Kg-cm
Please use flat Pin



AUX

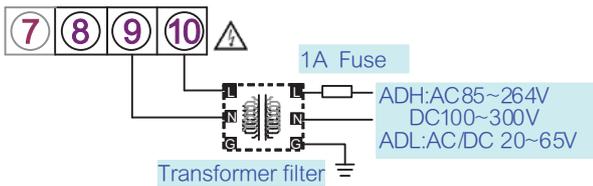


Analogue output

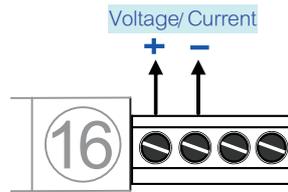

Output mode: Selectable within parameters setting, voltage or current output need to short J2 & J3 on output PCB module.

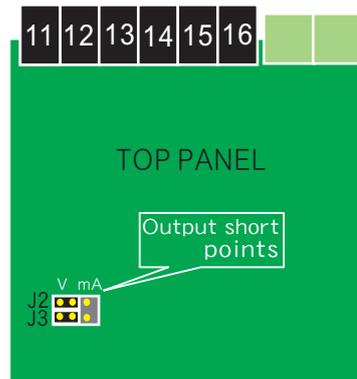Analogue output




J2 J3 : Current
J2 J3 : Voltage


Pulse output

Due to limitation on number of terminal, pulse and relay output is having same terminal, choose either one

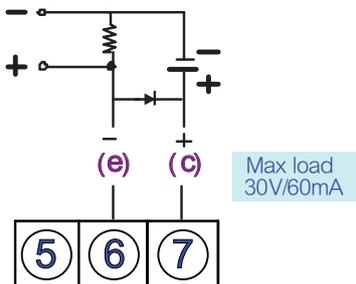
Open collector:(OPC1)



Relay Pulse output :(OPR1)

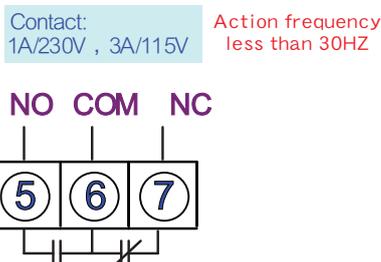


Analogue + RS485

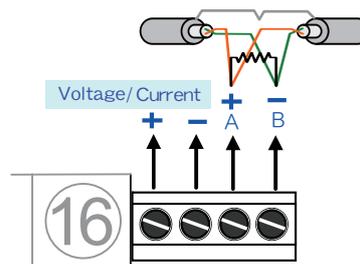


Alarm Relay output:(OR1)

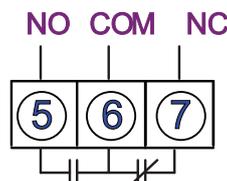Contact:
1A/230V, 3A/115V




RS485 Com.

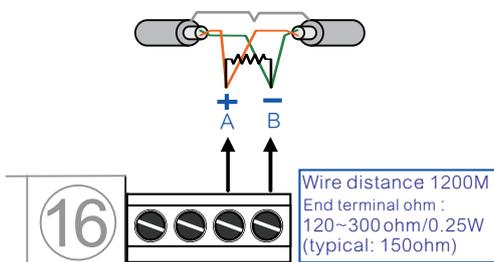⚠ Please earth isolation net to maintain signal quality



Operation flow chart:

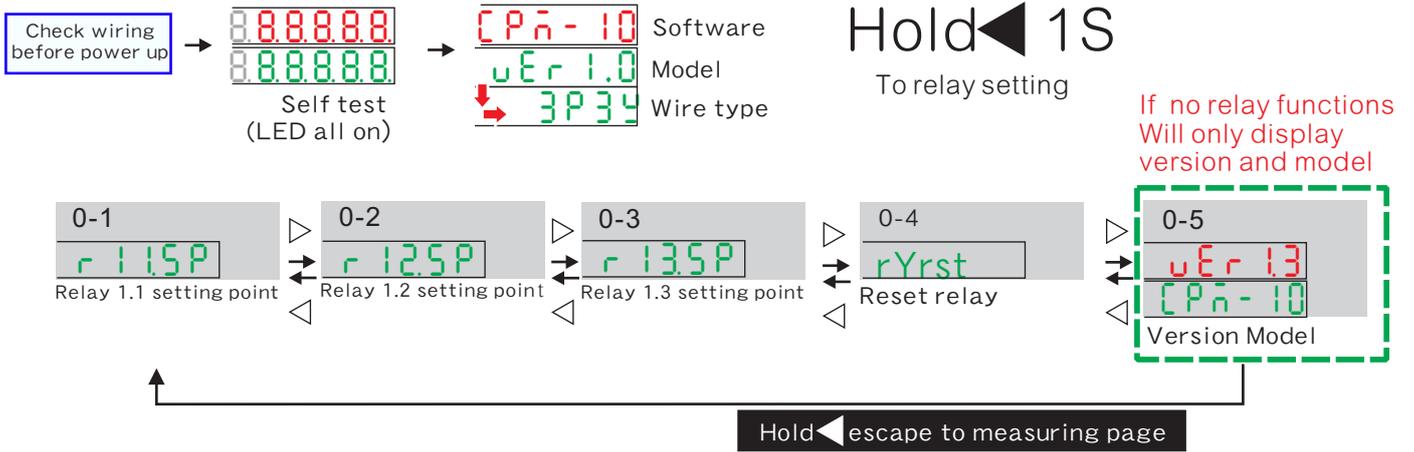

V A
220.0 100.0
0.0 W 0.0 W/Hr



At 1-28 display function, choose V-A (voltage/current), display as left, during KWH selection.

Parameter setting(A-1),connection different.will have a different display(tick shown)

	1P2W	1P3W	3P3W.1	3P3W.2	3P3W.3	3P4W.1	3P4W.3		1P2W	1P3W	3P3W.1	3P3W.2	3P3W.3	3P4W.1	3P4W.3		1P2W	1P3W	3P3W.1	3P3W.2	3P3W.3	3P4W.1	3P4W.3	
V.AVG	✓	✓	✓	✓	✓	✓	✓	VA			✓	✓	✓	✓	✓	PA						✓	✓	✓
I.AVG	✓	✓	✓	✓	✓	✓	✓	VB			✓	✓	✓	✓	✓	PB						✓	✓	✓
FREQ	✓	✓	✓	✓	✓	✓	✓	VC			✓	✓	✓	✓	✓	PC						✓	✓	✓
P.TL	✓	✓	✓	✓	✓	✓	✓	IA	✓		✓	✓	✓	✓	✓	QA			✓	✓	✓	✓	✓	✓
Q.TL	✓	✓	✓	✓	✓	✓	✓	IB			✓	✓	✓	✓	✓	QB						✓	✓	✓
S.TL	✓	✓	✓	✓	✓	✓	✓	IC	✓							QC						✓	✓	✓
PF.AVG	✓	✓	✓	✓	✓	✓	✓	PF-A			✓	✓	✓	✓	✓	SA			✓	✓	✓	✓	✓	✓
AETL	✓	✓	✓	✓	✓	✓	✓	PF-B								SB						✓	✓	✓
RETL	✓	✓	✓	✓	✓	✓	✓	PF-C			✓	✓	✓	✓	✓	SC						✓	✓	✓

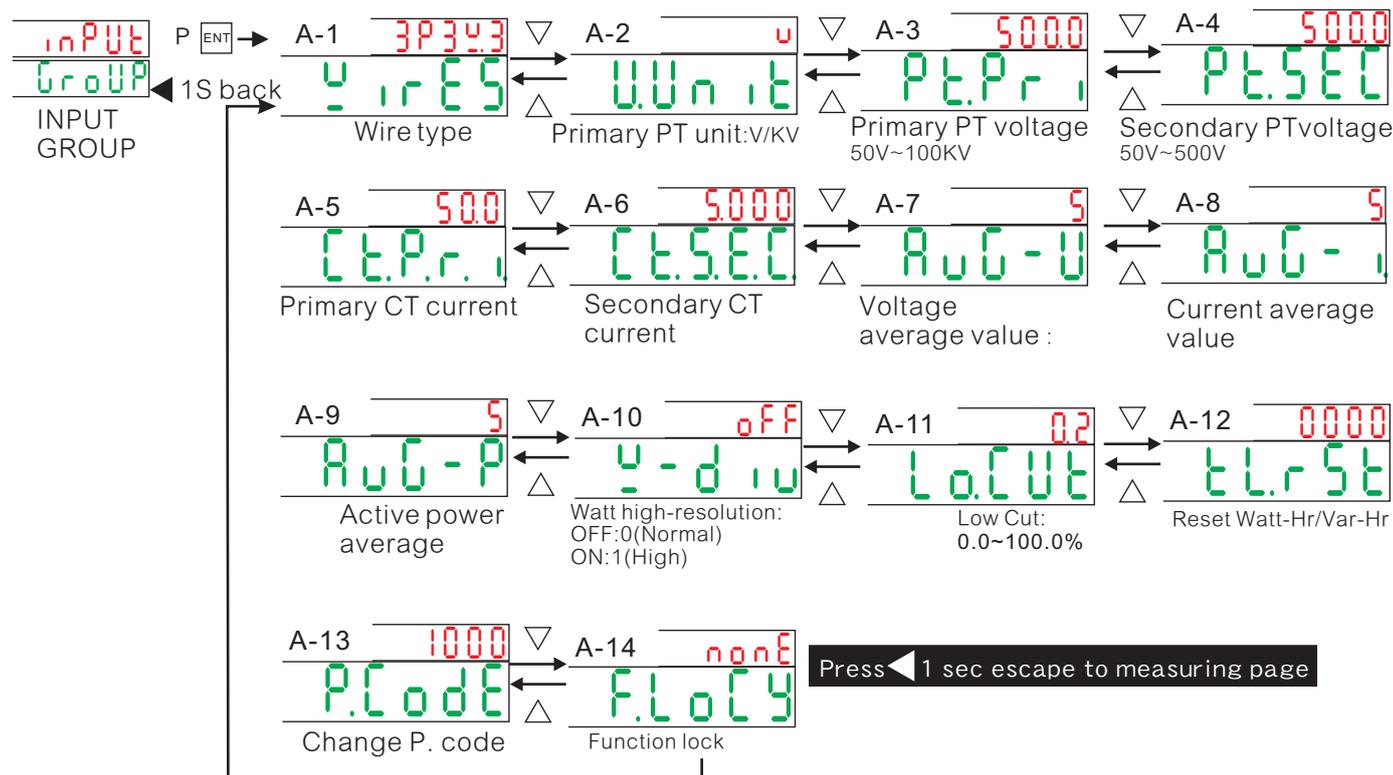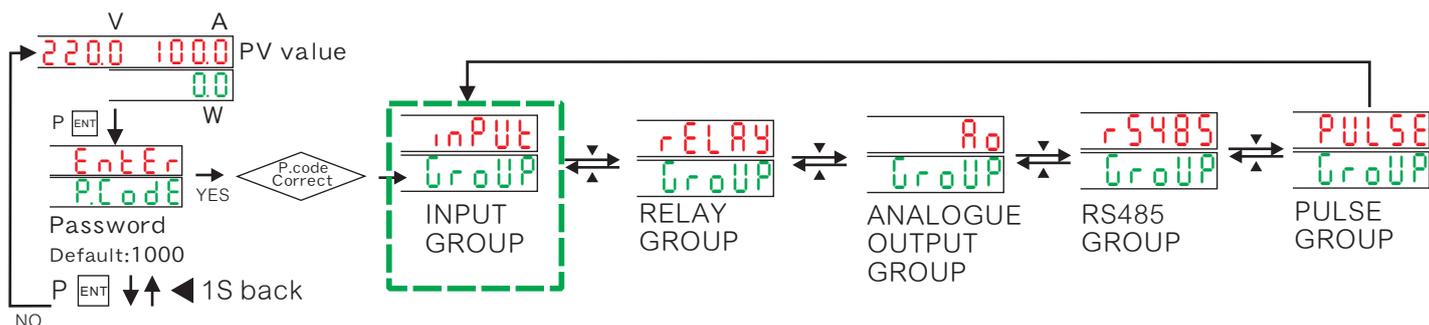
Press Measuring page





Parameter Description

Index	Explain	Index	Explain
A-1	Wiring:1P2W / 1P3W/3P3W.1 / 3P3W.2/	A-7	Voltage average value :Range 2~99
A-2	Primary PT unit:V/KV	A-8	Current average value : Range 2~99
A-3	Primary PT voltage 50.0V~100KV	A-9	Active power average : Range 2~99
A-4	Secondary PTvoltage 50.0V~500V	A-12	Reset Watt-Hr/Var-Hr: 0~9999
A-5	Primary CT current 1.0A~2999.9A	A-13	Change P. code: 0000~9999
A-6	Secondary CT current	A-14	Function lock:NONE/USER/ENG/ALL

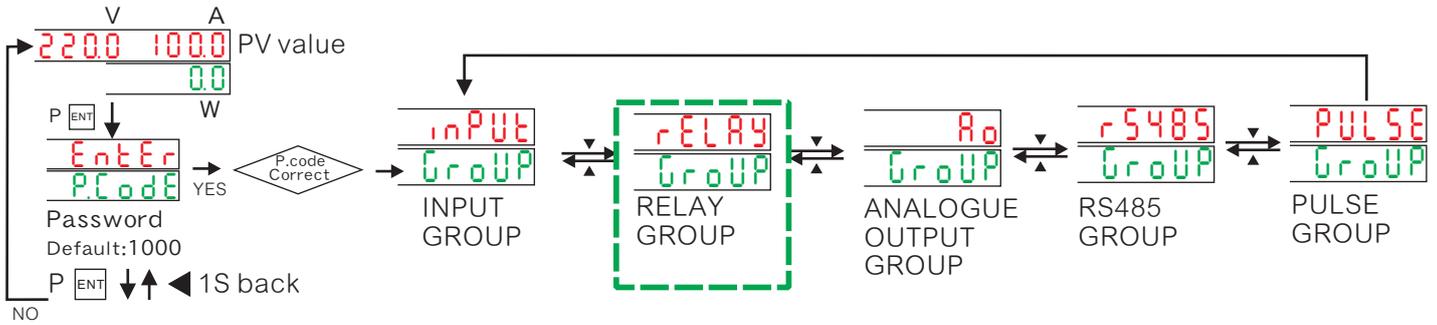

RELAY GROUP

B-1 UAVG r 1.15L Relay R1.1 parameters:

B-2 oFF r 1.1nd Relay R1.1 mode:

B-3 3000 r 1.15P Relay R1.1 set point:

B-4 .AVG r 1.25L Relay R1.2 parameters same

B-5 Lo r 1.2nd Relay R1.2 mode:

B-6 2500 r 1.25P Relay R1.2 set point

B-7 FrEq r 1.35L Relay R1.3 parameters same as R1.1

B-8 oFF r 1.3nd Relay R1.3 mode:

B-9 4500 r 1.35P Relay R1.3 set point:

B-10 ADUNC Prod Program: BASIC backto B-1/ ADUNC down to B-11

B-11 000 r 1.15b Relay R1.1 start band

B-12 0000 r 1.15d Relay R1.1 start delay

B-13 000 r 1.1Hy Relay R1.1 hysteresis:

B-14 0000 r 1.1rd Relay R1.1 delay energize:

B-15 0000 r 1.1Fd Relay R1.1 delay de-energize:

B-16 000 r 1.25b Relay R1.2 start band

B-17 0000 r 1.25d Relay R1.2 start delay

B-18 000 r 1.2Hy Relay R1.2 hysteresis:

B-19 0000 r 1.2rd Relay R1.2 delay energize:

B-20 0000 r 1.2Fd Relay R1.2 delay de-energize:

B-21 000 r 1.35b Relay R1.3 start band

B-22 0000 r 1.35d Relay R1.3 start band

B-23 000 r 1.3Hy Relay R1.3 start delay

B-24 0000 r 1.3rd Relay R1.3 delay energize:

B-25 0000 r 1.3Fd Relay R1.3 delay de-energize:

Press ◀ 1 sec escape to measuring page

Parameter Description

Index	Explain
B-1	Parameter settings:
B-4	<ul style="list-style-type: none"> <u>u</u> <u>A</u> <u>V</u> <u>G</u> :3 Phase average voltage <u>i</u> <u>A</u> <u>V</u> <u>G</u> :3 Phase apparent power
B-7	<ul style="list-style-type: none"> <u>F</u> <u>r</u> <u>E</u> <u>q</u> :Frequency <u>P</u> <u>.</u> <u>t</u> <u>L</u> :3 Phase active power <u>q</u> <u>.</u> <u>t</u> <u>L</u> :3 Phase reactive power <u>S</u> <u>.</u> <u>t</u> <u>L</u> :3 Phase apparent power <u>P</u> <u>F</u> <u>.</u> <u>A</u> <u>V</u> <u>G</u> :3 Phase average power factor <u>u</u> <u>A</u> :Phase A voltage <u>u</u> <u>b</u> :Phase B voltage <u>u</u> <u>c</u> :Phase C voltage <u>i</u> <u>A</u> :Phase A current <u>i</u> <u>b</u> :Phase B current <u>i</u> <u>c</u> :Phase C current
	<ul style="list-style-type: none"> Parameter settings: <u>P</u> <u>F</u> - <u>A</u> :Phase A power factor <u>P</u> <u>F</u> - <u>b</u> :Phase B power factor <u>P</u> <u>F</u> - <u>c</u> :Phase C power factor <u>P</u> - <u>A</u> :Phase A active power factor <u>P</u> - <u>b</u> :Phase B active power factor <u>P</u> - <u>c</u> :Phase C active power factor <u>q</u> - <u>A</u> :Phase A reactive power <u>q</u> - <u>b</u> :Phase B reactive power <u>q</u> - <u>c</u> :Phase C reactive power <u>S</u> - <u>A</u> :Phase A apparent power <u>S</u> - <u>b</u> :Phase B apparent power <u>S</u> - <u>c</u> :Phase C apparent power

Parameter Description

Index	Explain
B-2 B-5 B-8	Relay mode: LO/HI/LO.HLD/ HI.HLD/DO/OFF
B-3 B-6 B-9	Relay set point range: -199.99~299.99
B-11 B-16 B-21	Relay start band:0.00~99.99 (count)
B-12 B-17 B-22	Relay start delay times: 0.00.00~9.59.9(min/sec/0.1s)
B-13 B-18 B-23	Relay hysteris:0.00~50.00(count)
B-14 B-19 B-24	Relay delay energize: 0.00.0~9.59.9(min/sec/0.1s)
B-15 B-20 B-25	Relay delay de-energize: 0.00.0~9.59.9(min/sec/0.1s)

Lo(Low Level Energized) :
When the displayed value is lower than the set value (PV < Set point), the relay action °

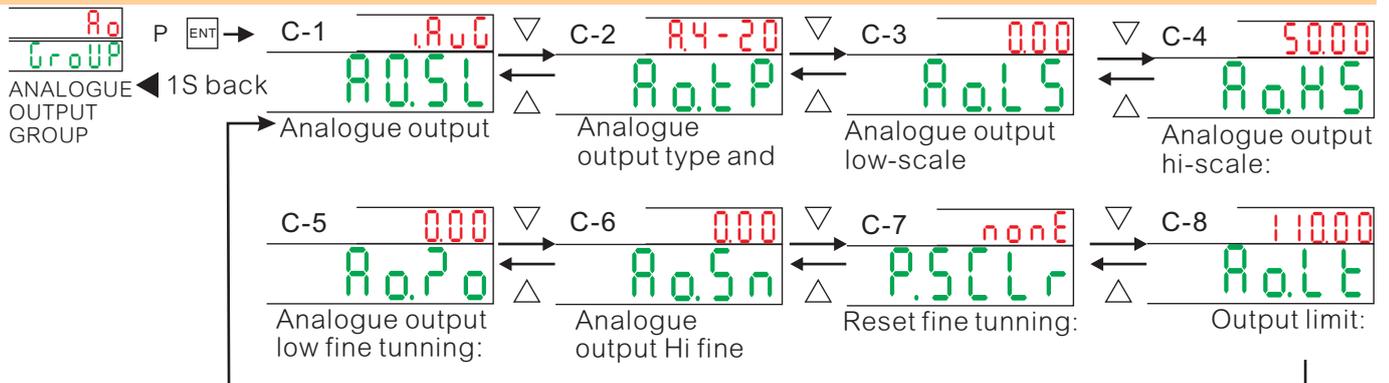
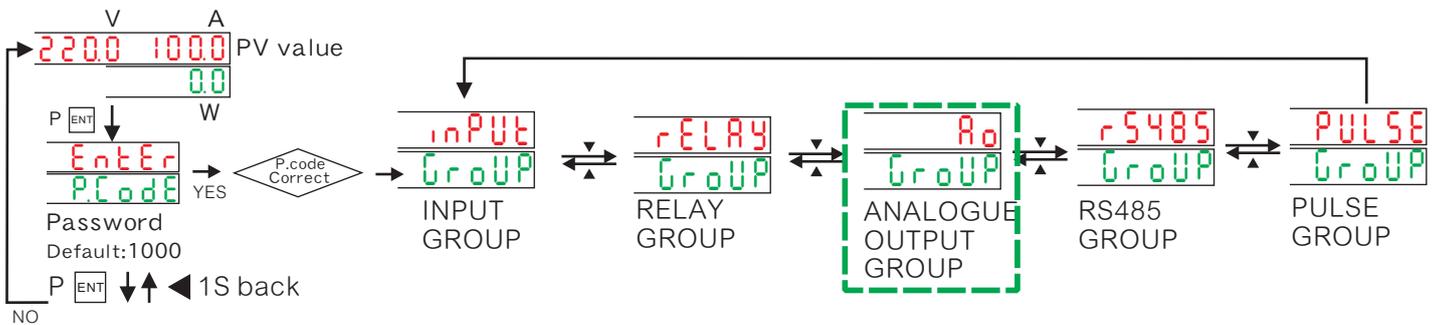
Hi(High Level Energized) :
When the displayed value is higher than the set value (PV > Set point), the relay action °

Lo.hld:
(Low Level energized hold) : Displayed value lower than set value action, and continued to maintain action.

HI.HLD:
(High Level energized hold) : Displayed value higher than the set value, the action, and continued to maintain action. °

DO:(Digital Output) : With RS485 function, the relay can be used as a function of DO force the relay action from the RS485 command °

Engineer level





Press ◀ 1 sec escape to measuring page



Parameter Description

Index	Explain	
C-1	AO corresponding the parameters: $\bar{u} \cdot \bar{R} \bar{u} \bar{C}$:3 Phase average voltage $\bar{i} \cdot \bar{R} \bar{u} \bar{C}$:3 Phase apparent power $\bar{F} \bar{r} \bar{E} \bar{q}$:Frequency $\bar{P} \cdot \bar{t} \bar{L}$:3 Phase active power $\bar{q} \cdot \bar{t} \bar{L}$:3 Phase reactive power $\bar{S} \cdot \bar{t} \bar{L}$:3 Phase apparent power $\bar{P} \bar{F} \cdot \bar{R} \bar{u} \bar{C}$:3 Phase average power factor $\bar{u} \bar{R}$:Phase A voltage $\bar{u} \bar{b}$:Phase B voltage $\bar{u} \bar{C}$:Phase C voltage $\bar{i} \bar{R}$:Phase A current $\bar{i} \bar{b}$:Phase B current $\bar{i} \bar{C}$:Phase C current	AO corresponding the parameters: $\bar{P} \bar{F} - \bar{R}$:Phase A power factor $\bar{P} \bar{F} - \bar{b}$:Phase B power factor $\bar{P} \bar{F} - \bar{C}$:Phase C power factor $\bar{P} - \bar{R}$:Phase A active power factor $\bar{P} - \bar{b}$:Phase B active power factor $\bar{P} - \bar{C}$:Phase C active power factor $\bar{q} - \bar{R}$:Phase A reactive power $\bar{q} - \bar{b}$:Phase B reactive power $\bar{q} - \bar{C}$:Phase C reactive power $\bar{S} - \bar{R}$:Phase A apparent power $\bar{S} - \bar{b}$:Phase B apparent power $\bar{S} - \bar{C}$:Phase C apparent power
C-2	Output signal of type and range : A.0-10/A.0-20/A.4-20/ A.4B.20/A.B.10/A.B.20/ V.0-5/V.1-5/V.0-10/V.0B.5/	Current: A0-10:0~10A A0-20:0~20A A.4-20:4~20A A.4B20:4~12~20A Ab10:±10A Ab20:±20A Voltage: V0-5:0~5V V1-5:1~5V V0-10:0~10V V0B5:0~2.5~5V V1B5:1~3~5V V0B10:0~5~10V Vb5:±5V Vb10:±10V
C-3	Analogue output low-scale: -19999~29999	C-4 Analogue output hi-scale: -19999~29999
C-5	Analogue output low fine tuning::	C-6 Analogue output Hi fine tuning: -32768~32767
C-7	Reset fine tuning: NONE/AO.ZRO/AO.SPN/BOTH	$\bar{n} \bar{o} \bar{n} \bar{E}$ (NONE): Does not clear the correction $\bar{R} \bar{a} \bar{P} \bar{r} \bar{o}$ (Ao.Zro): Clear the lower limit of fine-tuning $\bar{R} \bar{a} \bar{S} \bar{P} \bar{n}$ (Ao.SPn): Clear upper limit of fine-tuning $\bar{b} \bar{o} \bar{t} \bar{H}$ (both): Clear the lower limit, upper limit of fine-tuning correction
C-8	Output limit:0~110 %	

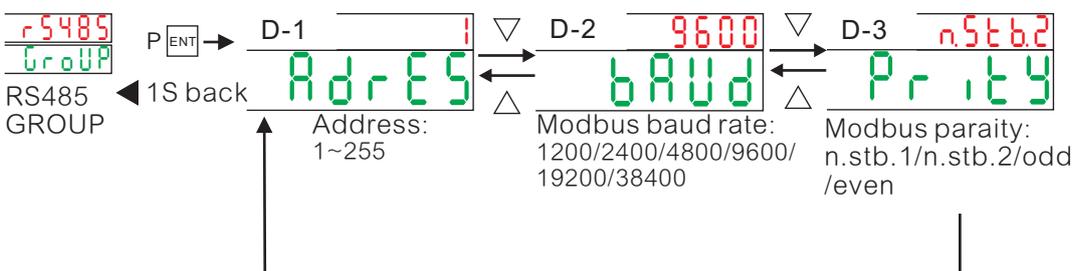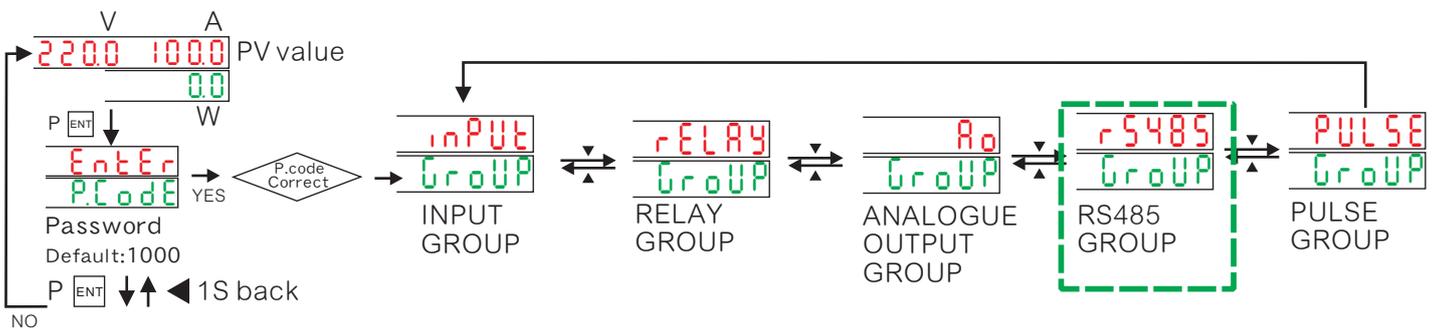Engineer level



Press ◀ 1 sec escape to measuring page


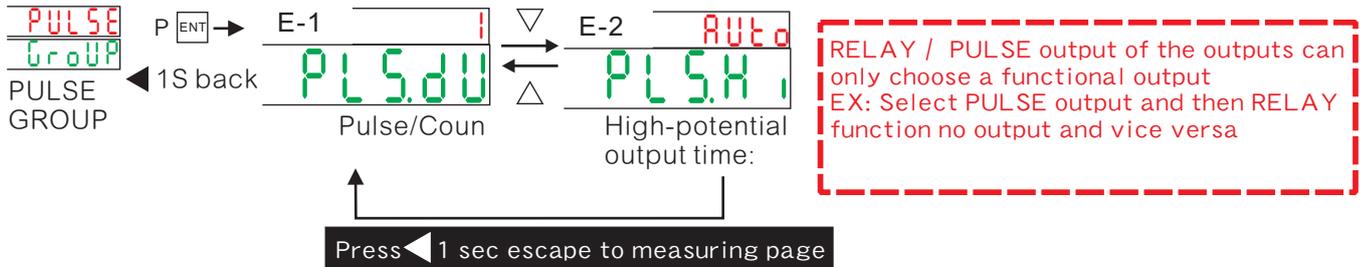
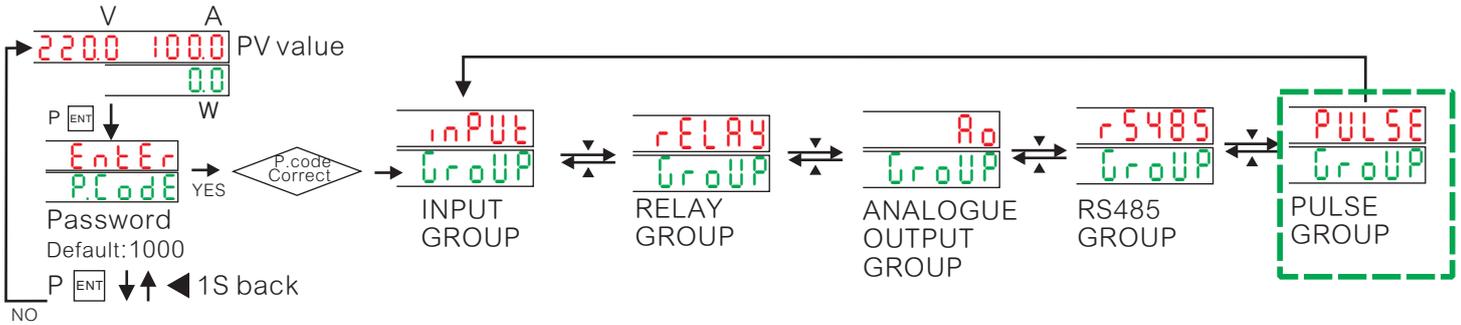


Parameter Description

Index	Explain	
E-1	Pulse output/Count setting: 1~9999	※When set 1, mean 1 count watt hr give 1 pulse: When set 1000, mean 1000 count watt hr give 1 pulse ,
E-2	Hi-voltage output time: 0(AUTO)~5000	※When set 0, mean Duty cycle is 50% ; setting 1~5000(x4ms.) time length , please beware at long time length, high frequency the output may remain at H-voltage and not completing a full pulse cycle, resulting data not readable.




Operating Steps

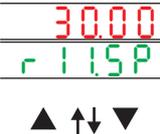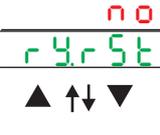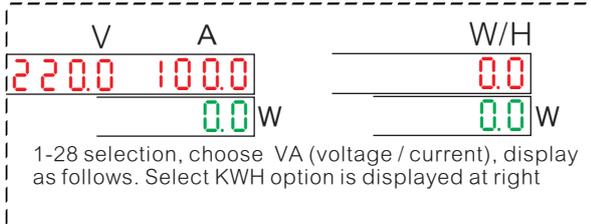User Level

Parameters	Display	Setting	Operation
<p>Power on Check the wiring</p> 	Self test LED all on		No need to set
	Wiring Model Version	Press ◀1Sec Into the relay function	
<p>0-1</p> 	Relay 1.1 funtion setting	Relay R1.1 value range:-199.99~299.99	Shift Increase Decrease Enter Press values blink,press & change value or selection when done press to next setting or hold 1 sec to previous selection list.
<p>0-2</p> 	Relay 1.2 funtion setting	Relay R1.2 value range:-199.99~299.99	Shift Increase Decrease Enter Press values blink,press & change value or selection when done press to next setting or hold 1 sec to previous selection list.
<p>0-3</p> 	Relay 1.3 funtion setting	Relay R1.3 value range:-199.99~299.99	Shift Increase Decrease Enter Press values blink,press & change value or selection when done press to next setting or hold 1 sec to previous selection list.
<p>0-4</p> 	Reset relay function	Select:YE 5 / no	Shift Increase Decrease Enter Press values blink,press & change value or selection when done press to next setting or hold 1 sec to previous selection list.
<p>0-5</p> 	Version Model	There is no relay functions Will only display version	View only Press ▼ 1 sec escape to begining page Press ◀ 1 sec escape to measuring page.
Back to 0-1			
			

Operating Steps

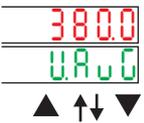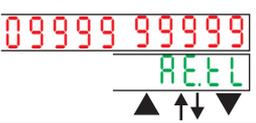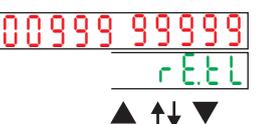User Level

Parameters	Display	Setting	Operation
Power on Check the wiring 	Self test LED all on		No need to set
	Wiring Model Version	Press ◀1Sec Into the measurement menu	
1-1 	3 Phase voltage average value	View only	The average voltage is the average of the voltage relative N ° $V.AVG=(V_{an}+V_{bn}+V_{cn})/3$ Voltage readings need to be interpreted in conjunction with voltage unit V or KV °
1-2 	3 Phase current average value	View only	The average current is the average flowing through the line current ° $I.AVG=(I_a+I_b+I_c)/3$ Displayed as the current units of ampere °
1-3 	Frequency	View only	Frequency is taken between the Van voltage frequency ° Range:45.00~75.00 Hz exceed Frequency range will affect the other parameters the accuracy of the reading °
1-4 	3 Phase power factor total	View only	The total effective power is the sum of each phase effective power ° The power of reading needs with the unit MW, KW or W °
1-5 	3 Phase reactive power	View only	Total invalid power is the power of total ° The power of reading needs with the unit MW, KW or W °
1-6 	3 Phase active power	View only	The power of reading needs with the unit MW, KW or W °
1-7 	3 Phase power factor average	View only	Total power factor (PF) = total effective power (P) / total apparent power (S)
1-8 	3 Phase total energy Watt-hr	View only Parameter based on $P \times 1.5L$ corresponding display	The only 5-digit display, but the cumulative number of bits to 8 digits, so into the down 4-digit "-9999", and the up 4 digits "9999 -" The 2 show ° Reading needs with the unit MW, KW or
1-9 	3 Phase reactive energy Var-hr	View only Parameter based on $P \times 2.5L$ corresponding display	The only 5-digit display, but the cumulative number of bits to 8 digits, so into the down 4-digit "-9999", and the up 4 digits "9999 -" The 2 show ° Reading needs with the unit MW, KW or
1-10 	A Phase voltage	View only	






Operating Steps

User Level

Parameters	Display	Setting	Operation
1-11 380.5 U-b ▲ ↑↓ ▼	B Phase voltage	View only	Each phase voltage refers to the relative N and white voltage ° $V_a(V_b \setminus V_c)$ with V_n voltage ° 3P4W wiring, only to show the line voltage of N, if you want to understand the line to line voltage, is only the value multiplied by 1.732. ° 3P3W wiring, S need to short circuit and N, so the only V_{ab} and V_{ca} value and read value is the line voltage ° Reading needs with the unit KV or V °
1-12 377.5 U-c ▲ ↑↓ ▼	C Phase voltage	View only	
1-13 299.99 I-A ▲ ↑↓ ▼	A Phase current	View only	Each phase current is flowing through the line current ° $I_a \setminus I_b \setminus I_c$ current ° Current unit is ampere °
1-14 299.99 I-b ▲ ↑↓ ▼	B Phase current	View only	
1-15 299.99 I-c ▲ ↑↓ ▼	C Phase current	View only	
1-16 0.980 PF-A ▲ ↑↓ ▼	A Phase power factor	View only	3P3W system, the system in "a phase current lag behind voltage 30 degree angle, "and" c phase current leads the voltage 30 degree angle", so the total power factor of 1.00, PF-A will be = 0.866, PF-C will be = -0.866, so the display is a normal phenomenon °
1-17 0.980 PF-b ▲ ↑↓ ▼	B Phase power factor	View only	
1-18 0.980 PF-c ▲ ↑↓ ▼	C Phase power factor	View only	
1-19 1000 P-A ▲ ↑↓ ▼	A Phase active power	View only	Reading needs with the unit MW, KW or W °
1-20 1000 P-b ▲ ↑↓ ▼	B Phase active power	View only	
1-21 1000 P-c ▲ ↑↓ ▼	C Phase active power	View only	
1-22 1000 Q-A ▲ ↑↓ ▼	A Phase reactive power	View only	

Operating Steps

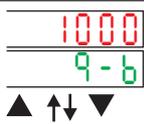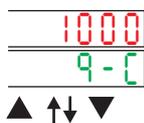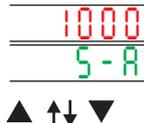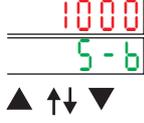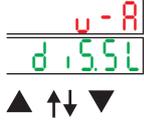User Level

Parameters	Display	Setting	Operation
1-23 	B Phase reactive power	View only	Reading needs with the unit M \ K or None(var) °
1-24 	C Phase reactive power	View only	
1-25 	A Phase apparent power	View only	
1-26 	B Phase apparent power	View only	Reading needs with the unit M \ K or None(var) °
1-27 	C Phase apparent power	View only	
1-28 	Select V-A/KWH	V-A/KWH	
Back to 1-1	Press  1 sec to measuring page		

Press  values blink, press,  &  change value or selection when done press  to next setting or hold  1 sec. to previous selection list
 Shift  Increase  Decrease  Enter

Operating Steps

Engineer level Shift Increase Decrease Enter 			
Parameters	Display	Setting	Operation
<div style="display: flex; justify-content: space-between;"> <div style="width: 20%;"> </div> <div style="width: 60%; border: 2px dashed red; padding: 5px; color: red; text-align: center;"> RELAY / PULSE output of the outputs can only choose a functional output EX: Select PULSE output and then RELAY function no output and vice versa </div> </div>			
<p>按 [ENT] ↓↑ P 1s Back</p>	INPUT GROUP Display		
A-1 <p>▲ ↑↓ ▼</p>	Input system selection: WIRES	Range: 1P2W/1P3W/3P3W.1/ 3P3W.2/3P3W.3/ 3P4W.1/3P4W.3	1P2W:1Phase 2 Wire 1P3W:1Phase 3 Wire 3P3W.1:3Phase 3 Wire 1CT(balanced) 、 3P3W.2:3Phase 3 Wire 2CT 、 3P3W.3:3Phase 3 Wire 3CT 、 3P4W.1:3Phase 4 Wire 1CT(balanced) 、 3P4W.3:3Phase 4 Wire 3CT 。
A-2 <p>▲ ↑↓ ▼</p>	Primary PT voltage unit: V.Unit	V / KV	Range: u / k u Press values blink, press & change value or selection when done press to next setting or hold 1 sec. to previous selection list
A-3 <p>▲ ↑↓ ▼</p>	Primary voltage setting range	Setting range: 50.0V~100KV	Shift Increase Decrease Enter ※Please note that this setting is the choice of the corresponding primary voltage units. For example, if Vunit kv, while this pTpri set to 45) 0, then the set primary voltage for 450.0KV. °
A-4 <p>▲ ↑↓ ▼</p>	Secondary voltage setting range	Setting range: 50.0V~500V	Press values blink, press & change value or selection when done press to next setting or hold 1 sec. to previous selection list
A-5 <p>▲ ↑↓ ▼</p>	Primary CT setting range	Setting range: 1.0A~2999.9A	Shift Increase Decrease Enter
A-6 <p>▲ ↑↓ ▼</p>	Secondary CT setting range	(VIEW ONLY)	Press values blink, press & change value or selection when done press to next setting or hold 1 sec. to previous selection list
A-7 <p>▲ ↑↓ ▼</p>	Average voltage setting:	Setting range: 2~99	Shift Increase Decrease Enter ※System may have interference or signal unstable sometimes, causing display unstable: This function help to decrease rapid change on the display. Increasing average value make display more stable,
A-8	Average current setting:	Setting range: 2~99	Shift Increase Decrease Enter ※System may have interference or signal unstable sometimes, causing display unstable: This function help to decrease rapid change on the display. Increasing average value make display more stable,

Operating Steps








Engineer level Shift Increase Decrease Enter

Parameters	Display	Setting	Operation
A-9	 ▲ ↑ ↓ ▼	Active power average value Setting range:	Setting range:2~99 Shift Increase Decrease Enter ※System may have interference or signal unstable sometimes, causing display unstable: This function help to decrease rapid change on the display. Increasing average value make display more stable,
A-10	 ▲ ↑ ↓ ▼	Watt high-resolution Setting range: OFF:0(Normal) ON:1(High) ※Default:OFF	Shift Increase Decrease Enter Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
A-11	 ▲ ↑ ↓ ▼	Low Cut Setting range:0.0~100.0% ※Default:0.2	Shift Increase Decrease Enter Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
A-12	 ▲ ↑ ↓ ▼	Reset watt-hr/var-hr to zero Password:0~9999 Rs485 Key in 0 to reset 。	Shift Increase Decrease Enter Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
A-13	 ▲ ↑ ↓ ▼	Change parameters level password: Password:0000~9999	Shift Increase Decrease Enter Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
A-14	 ▲ ↑ ↓ ▼ Return to A-1	Function lock select: NONE/USER/ENG/ALL Press 1 sec to measuring page	Shift Increase Decrease Enter none None: No function lock, user can enter and change setting User (User Level):User level lock,can view setting cant change parameters value Eng (Programming Level): Parameters setting lock ,can view setting cant change parameters value All (All Level): All level lock , can view setting cant change parameters value










Engineer level (Raelly Output)

Parameters	Display	Setting	Operation
	 按 ▼▲ P 1s Back	RELAY GROUP Display	Press 1 sec [RELAY GROUP]
B-1	 ▲ ↑ ↓ ▼	Relay R1.1 parameters page: Reference to corresponding table(table B-1) Default:V.AVG u .RUG 3 Phase average voltage .RUG 3 Phase average current F r E q Frequency P . t L 3 Phase active power q . t L 3 Phase reactive power S . t L 3 Phase apparent power P F .RUG 3 Phase power factor R E . t L 3 Phase Watt-hr r E . t L 3 Phase Var-hr u - R A Phase voltage u - b B Phase voltage u - C C Phase voltage i - R A Phase current i - b B Phase current i - C C Phase current P F - R A Phase power factor P F - b B Phase power factor P F - C C Phase power factor P - R A Phase active power P - b B Phase active power P - C C Phase active power q - R A Phase reactive power q - b B Phase reactive power q - C C Phase reactive power S - R A apparent power S - b B apparent power S - C C apparent power	Shift Increase Decrease Enter Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list Note: R1.1/R1.2/R1.3 is only one relay output function, but three mode (.1/.2./3-) group can be set to function In (.1/.2./3) group within any parameters set the conditions for the establishment of the relay action. But when the three groups of conditions have not set up the relay is still conduction until three parameter is not set up until reversion EX: the R1.1 setting parameters for u .RUG , when the R1.2 setting parameters to set parameters for i .RUG , R1.3 F r E q . Only R1.1 current average set point is reached, the relay action until below the set point automatically reset. When the three set parameters set point is reached, if only to exclude the R1.1 set point, then the relay is still action, until the R1.2 with R1.3 setpoint exclusion will revert to.

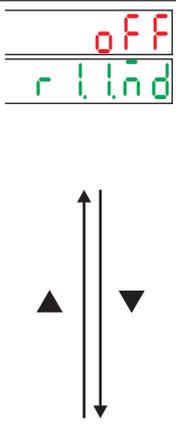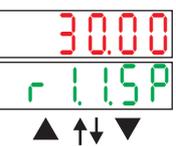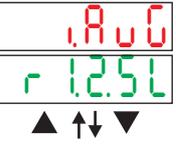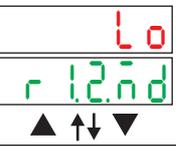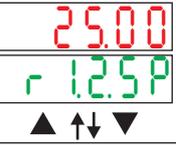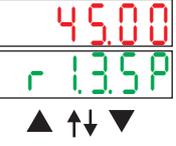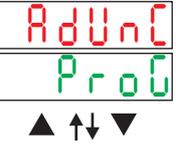Operating Steps

Engineer level (Raely Output)			
Parameters	Display	Setting	Operation
B-2 	Relay R1.1	Setting type: L.o /H.i /L.o.H.L.d /H.i.H.L.d / d.o /o.F.F.	 Press  values blink,press,  &  change value or selection when done press  to next setting or hold  1 sec. to previous selection list
B-3 	Relay R1.1 value setting:	Setting range: -199.99~299.99	Press  values blink,press,  &  change value or selection when done press  to next setting or hold  1 sec. to previous selection list
B-4 	Relay R1.2 Mode:	Relay R1.2 setting type :same R1.1	Press  values blink,press,  &  change value or selection when done press  to next setting or hold  1 sec. to previous selection list
B-5 	Relay R1.2 Mode:	Setting type: L.o /H.i /L.o.H.L.d /H.i.H.L.d / d.o /o.F.F.	Press  values blink,press,  &  change value or selection when done press  to next setting or hold  1 sec. to previous selection list
B-6 	Relay R1.2 value setting:	Setting range: -199.99~299.99	Press  values blink,press,  &  change value or selection when done press  to next setting or hold  1 sec. to previous selection list
B-7 	Relay R1.3 Mode:	Relay R1.3 setting type:same R1.1	Press  values blink,press,  &  change value or selection when done press  to next setting or hold  1 sec. to previous selection list
B-8 	Relay R1.3 Mode:	Setting type: L.o /H.i /L.o.H.L.d /H.i.H.L.d / d.o /o.F.F.	Press  values blink,press,  &  change value or selection when done press  to next setting or hold  1 sec. to previous selection list
B-9 	Relay R1.3 value setting:	Setting range: -199.99~299.99	Press  values blink,press,  &  change value or selection when done press  to next setting or hold  1 sec. to previous selection list
B-10 	Program selection:	prog (Programming for basic or advance setting):	 In parameters setting level, default is basic · during setting , it only show common functions,advance functions is hidden.User can change setting in each group , [P r O G] set it AdVAnC (advance) to show all functions.

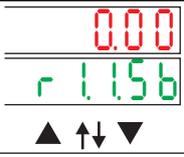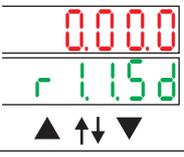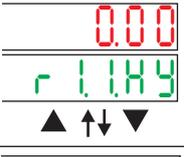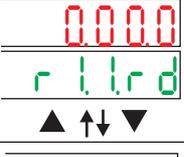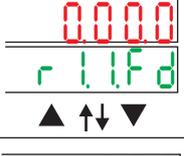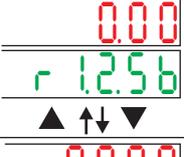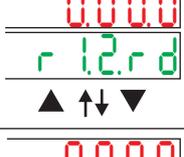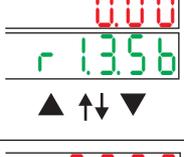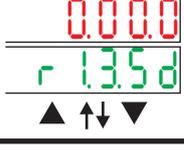Operating Steps





Engineer level (Raely Output) Shift Increase Decrease Enter 			
Parameters	Display	Setting	Operation
B-11		Relay R1.1 start band: Setting range:00.00~99.99	Shift Increase Decrease Enter When display exceed set start band and after Start delay time ,then relay compare PV value, energized.
B-12		Relay R1.1 start delay time: Setting range: 0.00.00~9.59.9	Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
B-13		Relay R1.1 hysteresis time: Setting range:0.00~50.00	Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
B-14		Relay R1.1 start delay time: Setting range: 0.00.0~9.59.9	Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
B-15		Relay R1.1 de-energized delay time: Setting range: 0.00.0~9.59.9	Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
B-16		Relay R1.2 start band: Setting range: 0.00~99.99	Shift Increase Decrease Enter When display exceed set start band and after Start delay time ,then relay compare PV value, energized.
B-17		Relay R1.2 start delay time Setting range: 0.00.00~9.59.9	Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
B-18		Relay R1.2 hysteresis time: Setting range:0.0~50.00	Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
B-19		Relay R1.2 start delay time: Setting range: 0.00.0~9.59.9	Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
B-20		Relay R1.2 de-energized delay time: Setting range: 0.00.0~9.59.9	Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
B-21		Relay R1.3 start delay time: Setting range:0.00~99.99	Shift Increase Decrease Enter When display exceed set start band and after Start delay time ,then relay compare PV value, energized.
B-22		Relay R1.3 start delay time: Setting range: 0.00.00~9.59.9	Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list


Operating Steps

Engineer level (Raely Output)			
Parameters	Display	Setting	Operation
B-23		Relay R1.3 hysteresis time: Setting range:0.00~50.00	Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
B-24		Relay R1.3 start delay time: Setting range: 0.00.0~9.59.9	Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
B-25		Relay R1.3 de-energized delay time: Setting range: 0.00.0~9.59.9	Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
Return to B-1	Press 1 sec to measuring page		



Engineer level (AO Output)			
Parameters	Display	Setting	Operation
		ANALOGUE OUTPUT Display	Press 1 sec to [AO GROUP]
C-1		Analogue output parameters setting: <ul style="list-style-type: none"> u .R u G 3 Phase average voltage i .R u G 3 Phase average current F r E q Frequency P .t L 3 Phase active power q .t L 3 Phase reactive power S .t L 3 Phase apparent power P F .R u G 3 Phase power factor R E .t L 3 Phase Watt-hr r E .t L 3 Phase Var-hr u - R A Phase voltage u - b B Phase voltage u - C C Phase voltage i - R A Phase current i - b B Phase current i - C C Phase current P F - R A A Phase power factor P F - b B Phase power factor P F - C C Phase power factor P - R A A Phase active power P - b B Phase active power P - C C Phase power factor q - R A A Phase reactive power q - b B Phase reactive power q - C C Phase reactive power S - R A A apparent power S - b B apparent power S - C C apparent power 	Press values blink,press, & change value or selection when done press to next setting or hold 1 sec. to previous selection list
C-2		Analogue output range Setting range:Voltage/Current	<p>Voltage: A0 - 10:0~10A R0 - 20:0~20A R.4 - 20:4~20A R.4b.20:4~12~20A R.b 10:±10A R.b 20:±20A</p> <p>Current: u0 - 5:0~5V u.1 - 5:1~5V u0 - 10:0~10V u0b.5:0~2.5~5V u.1b.5:1~3~5V u0b.10:0~5~10V u.b 5:±5V u.b 10:±10V</p>

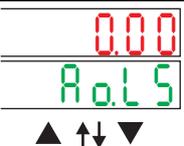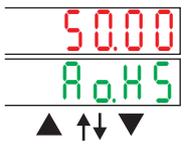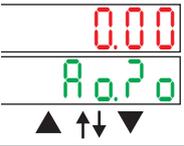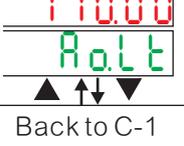Operating Steps

Engineer level (AO Output)    			
Parameters	Display	Setting	Operation
C-3		A/O Low scale range: Setting range: -199.99~299.99	    Ex: When A/O set R4 - 20 (4~20mA) display value as 0~199.99 user may set [AoLS] (Ao.LS) 5 so when, display value is 5 , A/O will give 4mA output
C-4		A/O high scale range: Setting range: -199.99~299.99	    Ex: When A/O set R4 - 20 (4~20mA) display value as 0~199.99 user may set [AoHS] (Ao.HS) 15 so when, display value is 15 , A/O will give 20mA output
C-5		A/O signal zero fine tuning: Setting range: -32768~32767	    When A/O low value is different from display (low), fine tuning can be done from front panel. During tuning please connect a higher accuracy meter, to measure output signal, so as calibration is within accuracy
C-6		A/O signal span fine tuning: Setting range: -32768~32767	    When A/O high value is different from display (high), fine tuning can be done from front panel. During tuning please connect a higher accuracy meter, to measure output signal, so as calibration is within accuracy °
C-7		Clear fine tuning value: Setting range: NONE/AO.ZRO/AO.SPN/BOTH	  none: None clear Ao.Zro: Zero clear Ao.Spn: Span clear both: Zero 1 span clear
C-8		A/O range limit: Setting range in %:0.00~110.00%	    Press  values blink, press,  &  change value or selection when done press  to next setting or hold  1 sec. to previous selection list
Back to C-1	Press  1 sec to measuring page		

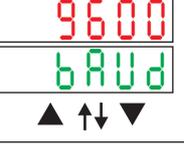Engineer level (RS485 Output)    			
Parameters	Display	Setting	Operation
		RS485 GROUP Display	Press  1 sec to [RS485 GROUP]
D-1		Address setting: Setting range: 1~255	Press  values blink, press,  &  change value or selection when done press  to next setting or hold  1 sec. to previous selection list
D-2		Modbus Baud rate: Setting range: 1200/2400/4800/9600/ 19200/38400	Press  values blink, press,  &  change value or selection when done press  to next setting or hold  1 sec. to previous selection list
D-3		Modbus pairty bit: Setting range: n.stb.1/.stb.2/odd/even	  nStb.1 (n.Stb.1): None, 1 stop bit nStb.2 (n.Stb.2): None, 2 stop bit odd (odd): odd Even (EvEn): Even
Back to D-1	Press  1 sec to measuring page		

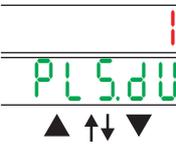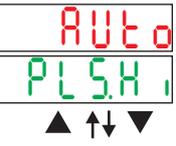Operating Steps

Engineer level (Pulse Output)			
Parameters	Display	Setting	Operation
 <p>PULSE GROUP 按 [ENT] ↓↑ P 1s Back</p>	PULSE GROUP Display		 <p>Press ◀ 1 sec to [PULSE GROUP]</p>
<p>E-1</p>  <p>▲ ↑↓ ▼</p>	Pulse output /Count setting:	Setting range:1~9999	 <p>※When set 1,mean 1 count watt hr give 1 pulse: When set 1000, mean 1000 count watt hr give 1 pulse ,</p>
<p>E-2</p>  <p>▲ ↑↓ ▼ Back to E-1</p>	Hi-voltage output time:	Setting range: 0(AUTO)~5000 (x 4ms)	 <p>※When set 0, mean Duty cycle.is 50% ; setting 1~5000(x4ms.) time length , please beware at long time length, high frequency the output may remain at H-voltage and not completing a full pulse cycle, resulting data not readable.</p>
<p>Press ◀ 1 sec to measuring page</p>			<p>RELAY / PULSE output of the outputs can only choose a functional output EX: Select PULSE output and then RELAY function no output and vice versa</p>

CPM-10 MODBUS ADDRESS TABLE**Address number are Hexadecima

Name	Address	Range	Explain	Initial	Read/Write
REtL	0000h	0~9999999999	Active Energy (High word)		R
	0001h		Active Energy (Mid word)		R
	0002h		Active Energy (low word)		R
rEtL	0003h	0~9999999999	Re-Active Energy (High word)		R
	0004h		Re-active Energy (Mid word)		R
	0005h		Re-active Energy (low word)		R
uRuG	0006h	0~29999	Average Voltage		R
iRuG	0007h	0~29999	Average Current		R
FrE9	0008h	0~9999	Frequency		R
PtL	0009h	-19999~29999	Total Active Power		R
9tL	000Ah	-19999~29999	Total Re-active Power		R
StL	000Bh	-19999~29999	Total Apparent Power		R
PF.RuG	000Ch	-1000~1000	Average Power Factor		R
u-R	000Dh	0~9999	Phase-A Voltage		R
u-b	000Eh	0~9999	Phase-B Voltage		R
u-L	000Fh	0~9999	Phase-C Voltage		R
i-R	0010h	0~9999	Phase-A Current		R
i-b	0011h	0~9999	Phase-B Current		R
i-L	0012h	0~9999	Phase-C Current		R
PF-R	0013h	-1000~1000	Phase-A Power Factor		R
PF-b	0014h	-1000~1000	Phase-B Power Factor		R
PF-L	0015h	-1000~1000	Phase-C Power Factor		R
P-R	0016h	-1999~9999	Phase-A Active Power		R
P-b	0017h	-1999~9999	Phase-B Active Power		R
P-L	0018h	-1999~9999	Phase-C Active Power		R
9-R	0019h	-1999~9999	Phase-A Re-active Power		R
9-b	001Ah	-1999~9999	Phase-B Re-active Power		R
9-L	001Bh	-1999~9999	Phase-C Re-active Power		R
S-R	001Ch	0~9999	Phase-A Apparent Power		R
S-b	001Dh	0~9999	Phase-B Apparent Power		R
S-L	001Eh	0~9999	Phase-C Apparent Power		R
i-dP	001Fh	0~2	DP of Current 0:0.000A 1:00.00A 2:000.0A		R
U-dP	0020h	0~3	DP of Voltage 0:000.0V 1:0000V 2:00.00kV 3:000.0kV		R
W-dP	0021h	0~6	DP of Active Power 0:0.1W 1:1W 2:0.01KW 3:0.1KW 4:1KW 5:0.01MW 6:0.1MW7:1MW		R
W.rES	0022h	0~3	Wiring of Voltage & Current Input 0: 1P2W 1: 1P3W 2: 3P3W.1 3: 3P3W.2 4:3P3W.3 5: 3P4W.1 6:3P4W.3	3	R/W
uUn.it	0023h	0~1	Unit for Primary Voltage of PT 0: V 1: kV	0	R/W
PtPr	0024h	500~29999	Primary Voltage of PT	3000	R/W
PtSE	0025h	500~5000	Secondary Voltage of PT	3000	R/W
ItPr	0026h	10~29999	Primary Current of CT	500	R/W
ItSE	0027h	1000/5000	Secondary Current of CT	5000	R
RuG-u	0028h	2~99	Average Display for Voltage	5	R/W
RuG-i	0029h	2~99	Average Display for Current	5	R/W
RuG-P	002Ah	2~99	Average Display for Power	5	R/W
ELrSE	002Bh	0~1	The Reset for Energy 0:No Clear values 1:Clear values	0	R/W
PCode	002Ch	0000~9999	Pass Code	1000	R/W
FLoLk	002Dh	0~3	Function Lock 0: none 1: User Level 2: Engineer Level 3: All	0	R/W
W-d.u	002Eh	0~1	Watt high-resolution 0: OFF(Normal) 1: ON(High)	0	R/W
LoCut	002Fh	0~1000	Low Cut	2	R/W

CPM-10 MODBUS ADDRESS TABLE**Address number are Hexadecima

Name	Address	Range	Explain	Initial	Read/Write
r115L	0031h	0~24	The parameter relative to Relay 1.1 0: Average Voltage 1: Average Current 2: Frequency 3: Total Active Power 4: Total Re-active Power 5: Total Apparent Power 6: Average Power Factor 7: Phase-A Voltage 8: Phase-B Voltage 9: Phase-C Voltage 10: Phase-A Current 11: Phase-B Current 12: Phase-C Current 13: Phase-A Power Factor 14: Phase-B Power Factor 15: Phase-C Power Factor 16: Phase-A Active Power 17: Phase-B Active Power 18: Phase-C Active Power 19: Phase-A Re-active Power 20: Phase-B Re-active Power 21:Phase-C Re-active Power 22: Phase-A Apparent Power 23: Phase-B Apparent Power 24: Phase-C Apparent Power	0	R/W
r115d	0032H	0~5	Relay 1.1 Energized Mode 0: No Use 1: Low Energized 2: High Energized 3: Low Energized Hold 4: High Energized Hold 5: Digital Output	2	R/W
r115P	0033H	-19999~29999	Relay 1.1 Set Point	3000	R/W
r125L	0034H	0~24	The parameter relative to Relay 1.2 0: Average Voltage 1: Average Current 2: Frequency 3: Total Active Power 4: Total Re-active Power 5: Total Apparent Power 6: Average Power Factor 7: Phase-A Voltage 8: Phase-B Voltage 9: Phase-C Voltage 10: Phase-A Current 11: Phase-B Current 12: Phase-C Current 13: Phase-A Power Factor 14: Phase-B Power Factor 15: Phase-C Power Factor 16: Phase-A Active Power 17: Phase-B Active Power 18: Phase-C Active Power 19: Phase-A Re-active Power 20: Phase-B Re-active Power 21: Phase-C Re-active Power 22: Phase-A Apparent Power 23: Phase-B Apparent Power 24: Phase-C Apparent Power	1	R/W
r125d	0035H	0~5	Relay 1.2 Energized Mode 0: No Use 1: Low Energized 2: High Energized 3: Low Energized Hold 4: High Energized Hold 5: Digital Output	2	R/W
r125P	0036H	-19999~29999	Relay 1.2 Set Point	5000	R/W
r135L	0037H	0~24	The parameter relative to Relay 1.3 0: Average Voltage 1: Average Current 2: Frequency 3: Total Active Power 4: Total Re-active Power 5: Total Apparent Power 6: Average Power Factor 7: Phase-A Voltage 8: Phase-B Voltage 9: Phase-C Voltage 10: Phase-A Current 11: Phase-B Current 12: Phase-C Current 13: Phase-A Power Factor 14: Phase-B Power Factor 15: Phase-C Power Factor 16: Phase-A Active Power 17: Phase-B Active Power 18: Phase-C Active Power 19: Phase-A Re-active Power 20: Phase-B Re-active Power 21: Phase-C Re-active Power 22: Phase-A Apparent Power 23: Phase-B Apparent Power 24: Phase C Apparent Power	3	R/W
r135d	0038H	0~5	Relay 1.3 Energized Mode 0: No Use 1: Low Energized 2: High Energized 3: Low Energized Hold 4: High Energized Hold 5: Digital Output	2	R/W
r135P	0039H	-19999~29999	Relay 1.3 Set Point	4500	R/W
r115b	003AH	0~9999	Start Band of input for Relay1.1 energized	0	R/W
r115d	003BH	0~5999 (0.1second)	Start Delay Time of input for Relay1.1 energized	0	R/W
r11H4	003CH	0~5000	Hysteresis of Relay 1.1	0	R/W
r11rd	003DH	0~5999 (0.1second)	Energized Delay Time of Relay 1 1	0	R/W
r11Fd	003EH	0~5999 (0.1second)	De-Energized Delay Time of Relay 1.1	0	R/W
r125b	003FH	0~9999	Start Band of input for Relay1.2 energized	0	R/W
r125d	0040H	0~5999 (0.1second)	Start Delay Time of input for Relay1.2 energized	0	R/W
r12H4	0041H	0~5000	Hysteresis of Relay 1.2	0	R/W
r12rd	0042H	0~5999 (0.1second)	Energized Delay Time of Relay 1.2	0	R/W
r12Fd	0043H	0~5999 (0.1second)	De-Energized Delay Time of Relay 1.2	0	R/W
r135b	0044H	0~9999	Start Band of input for Relay1.3 energized	0	R/W
r135d	0045H	0~5999 (0.1second)	Start Delay Time of input for Relay1.3 energized	0	R/W
r13H4	0046H	0~5000	Hysteresis of Relay 1.3	0	R/W
r13rd	0047H	0~5999 (0.1second)	Energized Delay Time of Relay 1.3	0	R/W
r13Fd	0048H	0~5999 (0.1second)	De-Energized Delay Time of Relay 1.3	0	R/W
Relay Status	0049H	0~7	bit0~bit2: Relay1.1~Relay1.3; 0=Relay off 1=Relay on		R/W

CPM-10 MODBUS ADDRESS TABLE**Address number are Hexadecima

Name	Address	Range	Explain	Initial	Read/Write
R _o .S _L	004DH	0~24	The parameter relative to Analog Output 1 0: Average Voltage 1: Average Current 2: Frequency 3: Total Active Power 4: Total Re-active Power 5: Total Apparent Power 6: Average Power Factor 7: Phase-A Voltage 8: Phase-B Voltage 9: Phase-C Voltage 10: Phase-A Current 11: Phase-B Current 12: Phase-C Current 13: Phase-A Power Factor 14: Phase-B Power Factor 15: Phase-C Power Factor 16: Phase-A Active Power 17: Phase-B Active Power 18: Phase-C Active Power 19: Phase-A Re-active Power 20: Phase-B Re-active Power 21: Phase-C Re-active Power 22: Phase-A Apparent Power 23: Phase-B Apparent Power 24: Phase-C Apparent Power	0	R/W
R _o .E _P	004EH	0~13	Analog Output 1 Type 0: V.0-5 1: V.1-5 2: V.0-10 3: V.0.b.5 4: V.1.b.5 5: V.0.b.10 6: V.b.5 7: V.b.10 8: A.0-10 9: A.0-20 10: A.4-20 11: A.4.b.20 12: A.b.10 13: A.b.20	10	R/W
R _o .L _S	004FH	-19999~29999	Analog Output 1 Low scale	0	R/W
R _o .H _S	0050H	-19999~29999	Analog Output 1 High scale	3000	R/W
R _o .P ₀	0051H	-32168~32767	Analog Output Zero adjustment	0	R/W
R _o .S _n	0052H	-32168~32767	Analog Output Span adjustment	0	R/W
P _S .C _L r	0053H	0~3	The clear of Analog Output Zero and Span 0: None 1: Zero 2: Span 3: Both	0	R/W
R _o .L _t	0054H	0~11000	Analog Output High Limit	11000	R/W

Name	Address	Range	Explain	Initial	Read/Write
R _d .E _S	0070H	1~255	RS485 address	1	R/W
b _R U _d	0071H	0~5	RS485 baud rate 0: 1200 1: 2400 2: 4800 3: 9600 4: 19200 5: 38400	3	R/W
P _r .E _P	0072H	0~3	RS485 parity 0: n-8-1 1: n-8-2 2: odd 3: even	1	R/W

Name	Address	Range	Explain	Initial	Read/Write
P _L .S _d u	007CH	1~9999	Pulse Divider	1	R/W
P _L .S _H i	007DH	0~5000	The Period of Pulse Output High 0(Auto)/~1~5000*4mSec	0	R/W